

OLYMPUS®

i-SPEED TR
i-SPEED 3
i-SPEED FS



GETTING STARTED GUIDE
High Speed Video Camera System


Contents

Chapter 1	System Connection	2
Chapter 2	Power-up	4
Chapter 3	Capture a scene	5


Chapter 1 System Connection

The *i*-SPEED TR, *i*-SPEED 3, *i*-SPEED FS camera system can be configured for use with the Controller display Unit (CDU) or PC/Laptop. Carefully remove all items from the packaging and connect the system for use with the CDU or PC/Laptop as shown below.

1.1 Camera Display Unit (CDU)

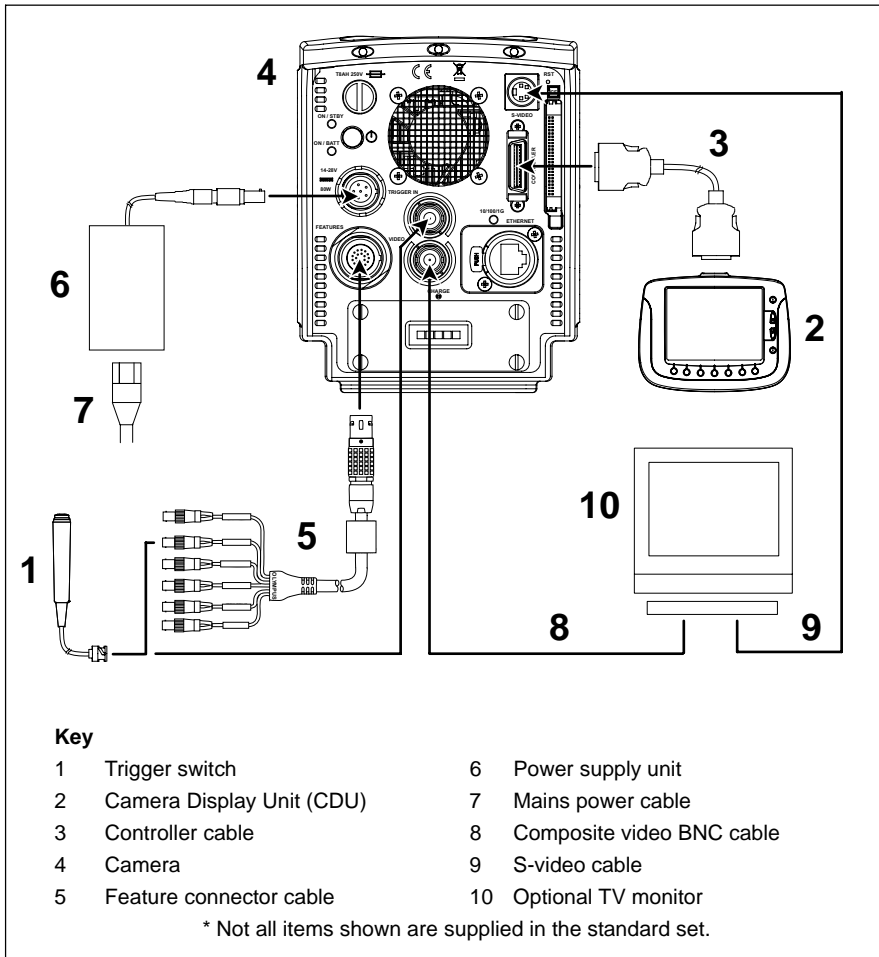

1.2 PC/Laptop

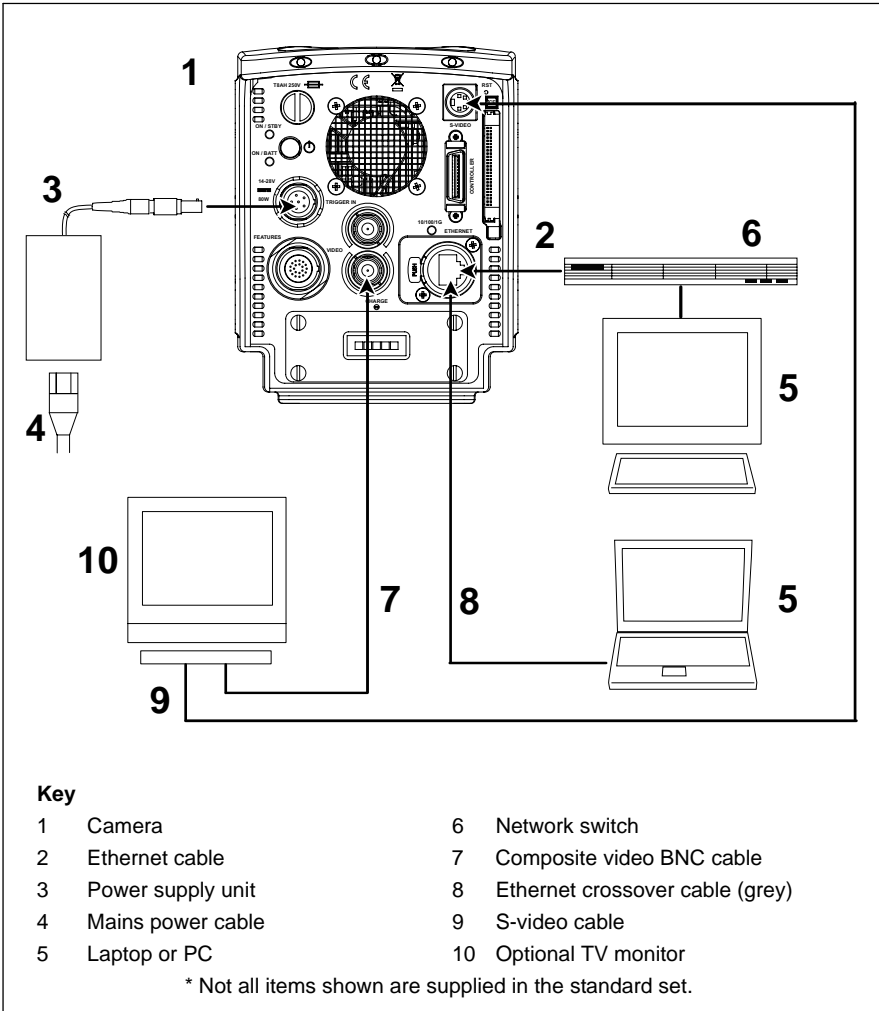

Chapter 2 Power-up

1. Connect the mains power cable to a suitable AC wall outlet and switch the power ON.
2. Press the power button on the rear of the camera. When the camera has powered up, the *i*-SPEED TR, *i*-SPEED 3, *i*-SPEED FS splash screen is displayed on the CDU.



3. Press any button on the CDU, the Home menu and a live video image is displayed on the CDU.



Chapter 3 Capture a scene

1. Press the Start button to enter the Start menu, then press the Speed and Shutter buttons and select the desired frame speed and shutter speed.



2. Adjust the lens focus and iris on the scene to achieve a sharp, bright image.
3. Press the Record button, the camera records video into its circular buffer until the Stop button is depressed or the trigger button is pressed.

If the trigger is used, recording will stop after a delay. This delay depends on memory size, the trigger position setting and frame speed. Refer to the main *i*-SPEED TR, *i*-SPEED 3, *i*-SPEED FS instructions for full details.



When recording has stopped, whether by trigger or STOP button, the camera will present the Playback Menu. Press the Player button to enter Player menu and display the first recorded image in the memory.

4. Player controls are: Bookmark, jump back (to bookmark), play backwards, Clip select, play forwards, jump forward (to bookmark), Loop. Pressing and holding the play forwards or play backwards buttons will provide fast forward and fast rewind functions.



The Bookmark control is used to set bookmarks at points of interest and are displayed as yellow vertical lines in the progress bar at the top of the screen. When the Trigger is used, an automatic bookmark is displayed as a Red vertical line.

5. Use the up/down buttons on the right hand side of the CDU to adjust playback speed.
6. If the video clip is to be saved, insert a Compact Flash card into the Compact Flash slot in the camera, then press Clip select.
7. Use the control buttons to move to the start frame and press Clip start, move to end frame and press Clip end.

Frame and memory status is displayed top right.

NOTE

Note that Clip select will not be available until a card is inserted.



8. To save the selected clip, press Save or to access image quality or video processing options, select Settings, the Save option is also available from this screen.
9. Enter the filename using the options on screen and press OK to save, the Card menu is displayed.



10. Press BACK as required to return to the Home menu.
Do not remove the Compact Flash card while the Compact Flash card removal warning is visible on the CDU menu screen.

OLYMPUS®

OLYMPUS CORPORATION

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo 163-0914, Japan
Telephone: (81) 3-6901-4038

OLYMPUS EUROPA HOLDING GMBH

Wendenstrasse 14-18, D-20097 Hamburg, Germany
Telephone: (49) 40-23-77-30

OLYMPUS NDT INC.

48 Woerd Ave, Waltham, MA 02453, U.S.A.
Telephone: (1) 781-419-3900

KEYMED (MEDICAL & INDUSTRIAL EQUIPMENT) LTD.

KeyMed House, Stock Road, Southend-on-Sea, Essex SS2 5QH, United Kingdom
Telephone: (44) 0-1702 616333

OLYMPUS SINGAPORE PTE LTD.

491B, River Valley Road #12-01/04, Valley Point Office Tower, Singapore 248373
Telephone: (65) 6834-0010

OLYMPUS MOSCOW LIMITED LIABILITY COMPANY

117071, Moscow, Malaya Kaluzhskaya 19, bld. 1, fl.2, Russia
Telephone: (7) 495-958-2278

OLYMPUS AUSTRALIA PTY. LTD.

31 Gilby Road, Mount Waverley, Victoria 3149, Australia
Telephone: (61) 3-9265-5400